# User Manual

## A7 Lite RO Water Purifier WJ2908-ROC60

Please read the instruction manual carefully before operating and keep it properly for future reference.





Scan the QR code through WeChat for customer service

## Contents

Warning	02
Water contact parts and material	03
Electric control schematic diagram	04
Water purification flow diagram	04
Product introduction	05
Product specification	05
Control panel introduction	06
Packing list	06
Filter replacement	07
Installation	07
Hazardous substance statement	08
Product maintenance guide	09

To ensure the best taste of the water, please try to use the water purifier as much as possible after the installtion in the first day. Use the RO water for kitchen cleaning or switch on the faucet for 20 minutes every 2 hours after installation. Flush the system more than 7 times to activate the RO membrane and enjoy the best taste of the purified RO water.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

The appliance is only to be used with the power supply unit provided with the appliance

#### Please observe following warning tips that are important to avoid risk and injury.



before operation and keep it properly for future reference.



The product is a house hold product, should be used under room temperature of 4°C to 40°C, avoid direct sunshine.














Feed water temperature exceed

38°Cor below 5°C may damage

RO membrane

Please observe following warning tips that are important to avoid risk and injury.

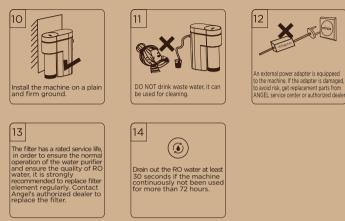


Tips: Install presurre reducing valve in the water inlet if water presurre  $\ge 0.4$ Mpa, it's normal the machine will has larger noise level when water presurre  $\le 0.15$ Mpa.


## Water contacted Parts and materials

Part name	Material	Quantity	Life time	Specification	
PS 1000	Polypropylene shell, folded PP cotton, carbon fiber	1 pc	no more than 6-12months	¢ 101x329mm	
Anti-scale filter	Polypropylene shell, phosphate granules	1 pc	no more than 12 months	ф 41х98mm	
RO membrane filter	Polypropylene shell, polyamide	1 pc	no more than 24-72months	φ 102x358mm	
Nano whisker/ Active carbon rod filter	PP filter shell, Active carbon rod, Nano zno whisker	1 pc	no more than 6-12months	ф 52x160mm	

(1)Life time of filter is based on regular family water usage, feeding water temperature range is 5-38°c,water pressure is 0.1-0.3Mpa,and feeding water is municipal tap water. (2)To ensure water quality and water purifier works normally, it is suggested to replace filter regularly base on instruction,ratedfilter lifetime will change based on feeding water temperature, water pressure, feeding water quality.

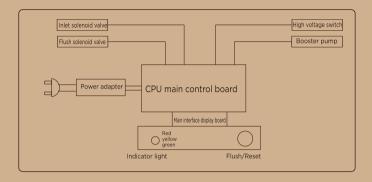

## Water purification flow diagram

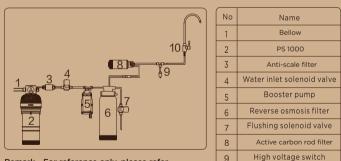


#### Remark: For reference only, please refer to actual product

Water purifier faucet

10

## **Product introduction**

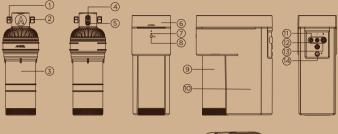




No.	Item	No.	Item	No.	Item	No.	Item
1	Water inlet connector	5	Pressure release connector	9	RO Filter	13	Water inlet connector
2	Purified water connector	6	Shield	10	Booster pump	14	Power supply
3	Compound filter	7	Filter lifetime indicator	11	Waste water connector	15	Active carbon rod filter
4	Purified water connector	8	Flush/Reset	12	RO water connector		

## **Product specification**

Model No.	WJ2908-ROC60
Applicable water source	Municipal tap water
Applicable water temperature	5°C-38°C
Room temperature	4°C-40°C
Water inlet pressure	0.1MPa-0.3MPa
Working pressure	0.4MPa-0.6MPa
RO water flow	1.0L/min
Rated purified water capacity	5000L
Power Supply	220V~50Hz
Rated power	70W
Eclectic shock proof class	II
Attention	Regularly flush and replace filters

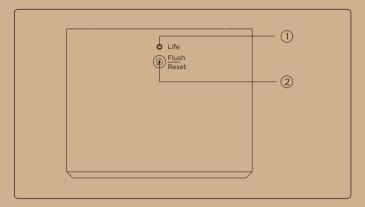

#### 1. Lifetime indicator

It is composed of a three-color lamp (red, yellow and green) to indicate the different lifetime of the filter.

Green light indicates the filter is normal.

Yellow light indicates the filter is about to expire.

Red light indicates the filter is expired and need to be replaced.

#### 2. Flush/reset button

2.1 Press the flush/reset button to turn flush mode on and off.


2.2 Keep press flush/reset key for 6 seconds to enter reset mode, touch flush/reset ket again within 6 seconds to reset filter lifetime, then return to normal working time. If the flush/reset key is not touched again within 6 seconds, exit filter reset mode and return to normal working mode.

 
## **Packing list**

Name	Unit	Quantity
RO water purifier	рс	1
PS1000	рс	1
PE tube(1/4")	рс	1
PE tube(3/8")	рс	1
Digital faucet	рс	1
Accessories	рс	1
AC power adaptor	рс	1

## Installation

After purchase users should contact Angel after sales service for free installation and tests.please confirm all the accessories in the **carton** are sufficient and complete.

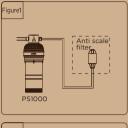



I.Installation of Anti scale filter (as shown in Figure 1)

II.Connect reverse osmosis purifier and connect power supply (as shown in Figure 2)

 Turn on faucet, water purifier will start to work then automatically flush the system for 10 seconds before enter normal working mode.
Turn off faucet, water purifier will stop water purification process.

3. Pipeline inspection: In pilot running, check if there is any leakage or loose parts, modules and connectors.

4. Clearup: Reorganize inlet, outlet and waste water tube and tighten them then clear up kitchen.

5. Flush: When first time install or replace reverse osmosis filter, to secure most clean water and best taste, we suggest every 2 hours start purify process and direct drain out RO water and keep 20 minutes, repeat 7 times to fully ensure the taste and activate the performance of RO membrane.

6. Enjoy the purified RO water after flushing.

## **Filter replacement**

Remark: To replace the filter, first turn off the water supply valve, then turn on the faucet to drain out water in machine, power off the machine to replace filters.

1. Turn off the water supply valve, the turn on faucet to drain out the water in machine.

2. Power off the machine after water completely drained out, remove the machine and put it on a firm and plain ground.

3. Twist out to remove old filter and twist in new filter.

4. Fix the water purifier in original position.

5. Check and adjust all water pipes and valves to correct positions.

6. Turn on faucet, switch on the power supply, press "flush/reset" to flush as required.

7. Please contact Angel authorized dealer when filter needs to be replaced.

	Hazardous substance					
Parts name	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Chromium (Cr, VI)	PBB	PBDE
PCB	Х	0	0	0	0	0
Power adapter	Х	0	0	0	0	0
Accessory	Х	0	0	0	0	0
Sensor	Х	0	0	0	0	0
Fuselage	0	0	0	0	0	0
Filter element	0	0	0	0	0	0
Pipe joint	0	0	0	0	0	0

## Hazardous substance statement

O: Indicate that the content of this hazardous substance in all homogeneous materials of the part is less than limit specified in GB/T26572-2011 Annex II X: Indicate that content of this hazardous substance at least in one homogeneous material of the parts exceed limit specified in GB/T26572-2011 Annex II According to electronics industry standard SJ/T11364-2014 and related regulation, the product and its internal or external components may contain environment friendly use period (EFUP) label. The EFUP label on the product may differ from label on components and use period on components takes priority over other EFUP label on the product.



AC adaptor 💦 🚯 RO water purifier

## **Product maintenance guide**

Problem	Cause	Solution		
Water purifier does not make water	PS 1000 is blocked. PS 1000 output water flow is too low. RO membrane is blocked. The power supply is not connected. Control board failure	Please contact Angel after-sales service personnel for maintenance		
Water leakage at the connection	The joint sealing ring is damaged. The sealing ring of the filter drum is damaged	Turn off water source and contact Angel after sales service personnel		
The purified water has peculiar smell	The water is not used for a long time and it is not flushed as required during initial installation. Raw water has peculiar smell	Drain off the water with peculiar smell and rinse the water again as required.		
Low purified water pressure	Water pipes leakage	Turn off water source and contact Angel after sales service personnel		
The waste water pipe is not drained	Filter blocked	Angel after sales service personnel		
Long running water of waste water pipe	Check valve damaged Water inlet, solenoid valve damaged	Turn off water source and contact Angel after sales service personnel		
The water purifier does not stop	RO membrane is seriously blocked. Fatigue damage of high-voltage switch The water inlet solenoid valve is damaged	Please contact angel's after-sales personnel to replace the damaged parts in time		
Loud noise	Water pressure below 0.15Mpa The whole machine res- onates with its surroundings. Internal water pipe interference. The front filter element is blocked. Front end equipment does not discharge	Increase water inlet pressure Shock absorption with pearl cotton Adjust the internal pipeline Or contact Angel after-sales service personnel to replace the damaged parts in time		

#### Shenzhen Angel Drinking Water Industrial Group Co.

401,No.13 Huiye Road,Tang jia Community,Fenghuang Street,Guangming District,Shenzhen,Guangdong,China

## www.angelgroup.com.cn

备注: 说明书为折页的版式,折叠方式参考样品。 文字内容颜色为PANTONE 476C 封面版本号中"###"为供应商代码,代码字母需大写。

名称

批准

内审