# Shenzhen Angel Environmental Protection Technology Co., Ltd.

Address: 2F, building 1, Songbai Road East office building, Shiyan street, Bao'an District, Shenzhen Zip code: 518108
Manufacturer: Ningbo Aocheng Electric Appliance Co., Ltd. Address of manufacturer: No.68 Dagang 1st Road, Xinqi, Beilun District, Zhejiang Province
Tel: 0574-86881118
Zip code: 315800
Version code: XFY-19.08

Official website: www.angelgroup.com.cn

# INSTRUCTION GUIDE

# COMMERCIAL RO WATER PURIFIER

AHR27-4030K2

AHR27-2030K2

Please read this instruction manual carefully before operating and keep it properly for future reference.



# **Catalogue**

Attentions	01		
Product intr oduction	0	2	
Product specification	0	2	
Installation	0	3	
Structur al diagr ams	04	04	
Electric c ontrol schematic diagr am	04		
Water purification flo w diagr am	05	05	
Operation ins tructions	05		
Technical par ameter	06		
Service Information	0	7	
Product maint enance guide	0	7	
Packing lis t	08		

#### **Attentions**

- 1. The leakage circuit br eaker shall be ins talled at the po wer line inlet of the dir ect drinking machine, and the r ated power of the leak age circuit br eaker shall mat ch the r ated power of the select ed direct drinking machine .
- 2. In cold and ic e prone areas where the ambient t emperature is lower than 1  $^{\circ}$ C, when the direct drinking machine is not used f or a long time , the water inside the machine shall be emptied, and then the po wer supply shall be turned off .
- 3. The direct drinking machine should not be ins talled out doors or indoors in damp plac es, but indoors in a plac e with good dr ainage.
- 4. The tap w atter pressure must be  $\geq$  100KPA; if it is les s than 100KP A, please add a boos ter at the w atter inlet of the equipment.
- 5. If the w ater output of the equipment is significantly r educed, or the w ater quality and taste become poor , the professional personnel shall be immediat ely invited to clean the filter element or r eplace the filt er element.
- 6. In case of an y electrical f ailure of the equipment, it is r equired to ask professional personnel to replace the parts or eliminat e the failure. Non professional personnel ar e strictly prohibit ed to dismantle and as semble.
- 7. The direct drinking machine shall be ins talled in a proper place with flat ground, wide site, good drainage and convenient power connection.
- 8. The installed dir ect drinking machine mus t be stable.
- 9. For the firs t use, the water purification s ystem of the dir ect drinking machine mus t be flushed and tr eated, and the filt er element mus t be flushed and pr etreated.

And the posit activiated carbon musit be will ashed clean, and the will ashing water shall not flow winto the RO membriane until ther elisino black sellwage flowing out.

10. When the machine is not used f or a long time ( or the ambient t emperature is lower than zero), please shut do wn and dr ain the w ater in the machine .

 $\label{eq:continuous} \mbox{Filter barrel, pressure barrel, exchange tank and w} \qquad \mbox{ater tank } t \ \ \mbox{o prevent det} \ \ \mbox{erioration of ac} \ \ \mbox{c-umulat ed water or damage of parts due } t \qquad \mbox{o icing.}$ 

- 11. It is forbidden to block the air outlet and water outlet.
- 12. If the product is f ound t o have water leakage, the po wer shall be cut off immediat ely, and then the tap w ater shall be shut do wn and the local dealer shall be inf ormed or the servic e hotline of our c ompany shall be called. T he professional staff shall c ome to the door f or maintenance, and do not r epair by themselv es. If there is any situation in the self maint enance or the components are edamaged, our c ompany will not bear an y legal r esponsibility.
- 13. For people (including childr en) with ph ysical, sensory or int ellectual def ects, or lack of experienc e and kno wledge, please use the pr oduct c orrectly under the supervision of adults.
- 14. The applianc e shall not be cleaned with jet water.

Note: if the po wer cord is damaged, it mus t be replaced by the aft er-sales service personnel of angel companity.

#### 1.Product introduction

Thank you for pur chasing Angel dir ect drink machine . In order to make you install, use and maintain the pr oduct pr operly, please read the pr oduct manual car efully.

The water source of the pr oduct is municipal tap w ater, which is tr eated by PP + pre activated carbon + PP + r everse osmosis fill er + Post activ ated carbon. It can pr ovide clean and health er + Post activ ated carbon. It can pr ovide clean and health er + Post activ ated carbon. It can pr ovide clean and health er + Post activ ated carbon. It can pr ovide clean and health er + Post activ ated carbon. It can pr ovide et drinking machine er + Post active ated carbon. It can pr ovide et drinking machine er + Post active ated carbon. It can pr ovide et drinking machine er + Post active ated carbon. It can pr ovide et drinking machine er + Post active ated carbon. It can pr ovide et drinking machine er + Post active ated carbon. It can pr ovide et drinking machine er + Post active ated carbon. It can pr ovide et drinking machine er + Post active ated carbon. It can pr ovide et drinking machine er + Post active ated carbon. It can pr ovide et drinking machine er + Post active ated carbon. It can pr ovide et drinking machine er + Post active ated carbon. It can pr ovide extends the proof of the proo

#### 2.Product introduction

- 1. Step heating, la yer by layer water inlet la yer by layer heating, eff ective energy saving, to ensure that the water temperature is above 90  $^{\circ}$ C.
- 2. Five stage reverse osmosis filtr ation system can eff ectively remove sediment, rus t, residual chlorine , heavy metals and other harmful subs tances in the w ater.
- 3. Microcomput er program control design, personaliz ed elevation, LED high brightnes s display, integrating filt er element lif e, current time , fault pr ompt and t emperature display.
- 4. The delicat e touch butt on can provide water with long service elife and more convenient water intake.
- 5. The water temperature of hot w at a tar outlet is adjus table from 50  $^{\circ}$ C to 97  $^{\circ}$ C, and the hot water butt on is lock ed safely to prevent scalding.
- 6. Eco energy saving mode , timed on-off ener gy saving setting, can be set t o shut do wn in the period of not use , and automatically s tart bef ore use.
- 7. Double anti dry burning, w ater leakage protection of the whole machine , to ensure that the product oper ates in a safe environment.
- 8. Cold cathode UV germicidal lamp , with high efficiency of bact eriostasis and pr otection of water quality saf ety.

#### 3.Installation

#### 1. Check the packing list

Open the packing box and check whether all the materials are complete according to the packing list. If any lost materials are found, please contact the local dealer or the company directly.


#### 2. Selection of installation site

Choose places that are easy to connect water, power, drain water, avoid direct sunlight and clean; there is no accumulation of debris around, easy to install, no inflammable and explosive objects.


#### 3. Connected to water inlet

Take out the products and accessories and place them in a proper place. The direct drinking machine must be placed stably, with uneven water outlet from the waterproof nozzle; the water source is municipal tap water; equipped with independent valves; connected with the direct drinking machine with a 10 mm diameter PE pipe.


# 4.Structural diagrams

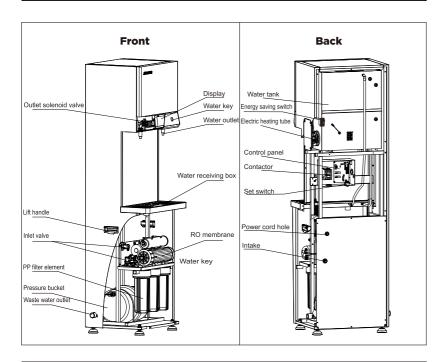

# 5. Electric control schematic diagram

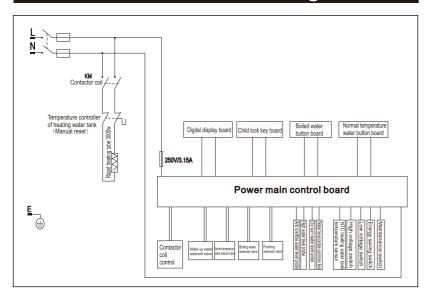


# **6.Water purification flow diagram**

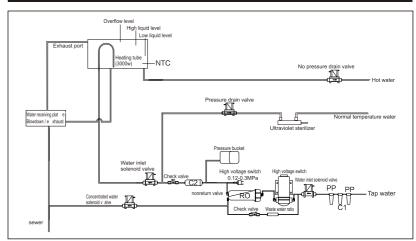

Note: ordinary v ersion without UV s terilization

# 7. Operation instructions

 

- 1. Child lock button
- Hot water button
- Filter element status display

- 4. Water shortage display
- Energy saving mode setting display
   Heating status display
   Time and hot water temperature display
- 7. Display of current date 8. Tin9. Normal temperature water button
- 1. Key oper ation ins tructions
- 1.1 hot water extraction: firs  $\,$  t press the child lock butt on, and then pr  $\,$  ess the hot w  $\,$  ater butt on when the sound is hear  $\,$  d. The indicat or light of the butt on flashes, and the hot w  $\,$  ater outlet solenoid v  $\,$  alve opens t o start hot w  $\,$  ater extraction. T  $\,$  hen press the hot w  $\,$  ater butt on again, and the indicat or light of the hot w  $\,$  ater butt on stops flashing. A  $\,$  t the same time  $\,$ , close the hot w  $\,$  ater outlet solenoid v  $\,$  alve to end hot w  $\,$  ater extraction.
- 1.2 take the constant t emperature water: press the constant t emperature water take butt on, the indicat or light of the normal t emperature water butt on will flash, and the normal t emperature water will flo w out of water and electricity.

When the magnetic v alve is opened, the normal t emperature water starts t o flow out; pr ess the normal temperature water butt on again, the indicat or light of the normal t emperature water butt on stops flashing, and at the same time , close the normal t emperature water outlet w ater and electricity magnetic valve to end the normal t emperature water flow.

Note: ordinary v ersion without child lock k ey!

### **8.Operation instructions**

#### 1. Setting mode:

- 1.1 setting mode of entry and e xit: when the whole machine is po wered on and ther e is no fault, close the setting s witch, the digital scr een displays fully, and the k ey light is always on, then pr ess and hold the "boiled w ater" and "normal t emperature water" butt ons simultaneously f or 5 seconds to enter the setting mode , at this time , the curr ent week \* of the digital scr een flashes, and the other displa ys are displayed as standby.

  After setting, disc onnect the setting s witch to exit the setting mode .
- 1.3 setting c ontent: aft er entering the setting mode , you can adjus t the time , week, startup , shutdown and heating t emperature.
- 2. Filter element lif e removal: after replacing the filt when the whole machine is po wered on and ther button for 8 seconds. After 8 seconds, the digital scruse of file accumulated time of the unexpired filt er element is cleared, and the accumulated when the sets witch is turned off.
- 3. Restore factory settings: first close the setting s witch, and then po wer on the whole machine. The digital scr een is fully displa yed and the k ey light is alw ays on. At the same time, press the "boiled w ater" butt on and the "normal t emperature water" butt on for 8 seconds. After 8 seconds, the digital scr een is fully displa yed and the k ey light is off . All settings ar e restored to factory settings. T he digital scr een and the k ey light ar e off. After the setting s witch is disc onnect ed, the machine r eturns t o factory status and continues t o work. If ther e is no valid key within one minut e, the screen will go out and all settings cannot be initializ ed. After the setting s witch is turned off , the machine will continue t o work in the pr evious state.

# 9. Technical parameter

Model No .	AHR27-4030K2	AHR27-2030K2	
Main filt er element	400G RO membr ane	200G RO membr ane	
Operating ambient t emperature	5℃-40℃	5℃-40℃	
Purification capacity	1.0L/min	0.53L/min	
Rated total net w ater	3000L	3000L	
Rated voltage	200V/50HZ	200V/50HZ	
Hot water output	30L/h		
Normal t emperature water output r ate	63L/h	32L/h	
Rated power	3300W	3300W	
Applicable w ater sources	Municipal tap w ater	Municipal tap w ater	
operated pressure	400kP a-700kPa	400kP a-700kPa	
Inlet pr essure	100kPa-400kP a	100kPa-400kP a	
Product siz e	500x462.5x17 20mm	500x462.5x153 7mm	

#### **10.Service Information**

- 1. In case of any abnormality of y our direct drinking machine , please follow the "maint enance guide". If y ou are unable to troubleshoot, please c ontact our company or your local distribution.
- 2. The product is guar anteed for one y ear. In case of damage caused b y the user during the warranty period, the mat erial cost will be appr opriat ely charged.
- 3. In case of an y fault aft er the w arranty period of the pr oduct, the cus tomer may require the company to repair and inspect the pr oduct, but the mat erial cost shall be char ged.
- 4. The company warns that the c ompany will not be r esponsible f or any consequenc es caused by the user's use of non pr oduction supporting parts t o replace them on the c ommer cial drinking w ater equipment.
- 5. You can also writ e to us or call us t o let us kno w the f ollowing:
- 5.1 product name , model, ins tallation method and pur chase dat e
- 5.2 Faults oc curred
- 5.3 mailing addr ess, name and c ontact inf ormation
- 6. Faults code
- E01 heating w ater tank t emperature sensor f ailure

E05 overflow fault

E06 dry burning w ater level failure

E07 water make-up solenoid v alve working pr otection

E08 continuous oper ation protection of water purifier

# 11.Product maintenance guide

Faults	Cause of f aults	Elimination method
No displa y	Power failure Fuse blown Energy saving switch on	Pending po wer supply Replace the fuse Disconnect the ener gy saving switch
Unheated	Thermostat failure Heating pope f ailure Contact or failure Electric c ontrol boar d failure	Replace the thermos tat, heating pipe , contact or or electric c ontrol boar d. If you can't install it yourself, please contact Angel 's service personnel f or installation
Water temperature is low	Insufficient heating time Heating pipe is burnt out Temperature sensor is broken	Wait for heating, r eplace the heating pipe or replace the t emperature sensor
Leakage switch can't be reset	Electric leak age Heating pipe is burnt out	Check cir cuit Replace the heating pipe
No effluent	Water outlet t emperature not reached Water shortage of w ater tank Damaged solenoid v alve or control boar d	Wait for the water temperature to rise To be replenished by water tank Replace solenoid valve or control boar d

6

# 12.Packing list

Name	Specification description	Unit	
Filter	10 inch PP filt er cartridge (2 piec es), 10 inch activ ated carbon filt er cartridge (1 piec e)	Pc	3
RO membr ane	400G/ 200G	Pc	1
Wrench	10 inch buck et wrench	Pc	1
Wrench	20 inch module case wr ench	Pc	1
Instruction guide	AHR27Commer cial RO w ater purifier	Pc	1
Warranty car d	Angel logo	Pc	1
Install inf ormation card	3	Pc	1
Attentions		Pc	1
Connecting bello ws	G1/2,L=50cm	Pc	1
Drain hose	Plastic, Ф32,L=1.0m	Pc	1
Drum shaped rubber particle	Plastic cement	Pc	3
Silicone pad	15mm, Φ19.8* Φ12*2.2	Pc	4

展开尺寸: 280X210mm, 折后尺寸: 140X210mm

材质: 128g铜版纸

封面彩印(按设计要求,蓝色为PANTONE 3125C,内页统一单黑印刷)

封面版本号中"###"为供应商代码,代码字母需大写.